

HOELSCHER

ONE MACHINE (9) BALE PACKAGES

Bale Flat or Hilly Terrain.

The HOELSCHER Model 1000 Accumulator can handle 10, 12, 14, 15, 18 or 21 bales per package.

- Most versatility in the industry
- Easy back up so you do not have to dump bales in tight corners or ditches
- Does not bend, twist or drag the bales
- Baler and accumulator turn as one unit
- Most maneuverable, ideal for small or large fields
- Always aligned with the baler
- Capable of stationary operation, for converting large bales into more profitable sized packages
- Great bale package control on hilly terrain




HOELSCHER UPGRADE SERVICE

G. L. Nause Co., Inc.


1971 Phoenix Drive
Loveland, Ohio 45140
513-722-9500

www.glnause.com

Expanding your Operation? Expand your Machine!

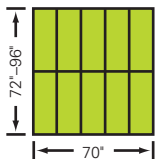


10 Bales (14"x18")x36"-48" long
Most versatile configuration of "standard" size bales. High capacity, yet extremely maneuverable. Flexibility of bale length. Use Model 100 Fork. Cross tie capable with GLN5X2-14 fork.
15 Cubes on 19' bed = 150 BALES¹

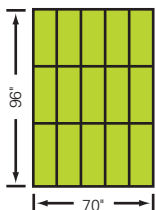


15 Bales (14"x18")x32" long *
With optional HOELSCHER "15 Bale Kit". Efficient system for handling short bales. Load trucks and trailers to full width. Use Model 110 Fork.

20 Cubes on 25' bed = 300 BALES¹

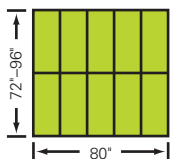


10 Bales (16"x18")x36"-48" long
With optional HOELSCHER "Bed Extension Kit". Common configuration for 16"x18" bales. Use Model 200 Fork.

15 Cubes on 21' bed = 150 BALES¹

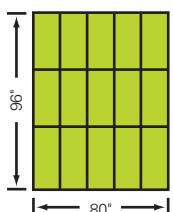

15 Bales (16"x18")x32" long *
With optional HOELSCHER "15 Bale Kit" and HOELSCHER "Bed Extension Kit". Efficient system for handling short bales. Load trucks and trailers to full width. Use Model 210 Fork.


20 Cubes on 25' bed = 300 BALES¹

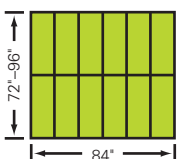

12 Bales (14"x18")x36"-48" long
Requires Nause 1475 Expansion Kit. Good System for loading van trailers. Use Model 200 fork with 4 extra hooks or GLN6X2-14 Fork.

15 Cubes on 22' bed = 180 BALES¹


20 Cubes on 30' bed = 240 BALES¹

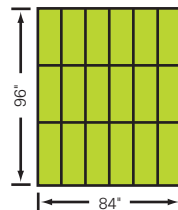

18 Bales (14"x18")x32" long *
Requires Nause 1475 Expansion Kit with extra hold down bar. Good System for loading van trailers. Load trucks and trailers to full width. Use Model 210 fork with 6 extra hooks or GLN6X3-14 Fork.


15 Cubes on 22' bed = 270 BALES¹

20 Cubes on 30' bed = 360 BALES¹

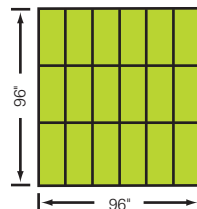


18 Bales (16"x18")x32" long *
Cross tie/square package. Load trucks and trailers to full width. Requires Nause 2750 Expansion Kit with extra hold down bar. Use GLN6X3-16 fork. Can be used to load 102" wide van trailers.

15 Cubes on 25' bed = 270 BALES¹

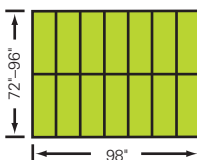

14 Bales (14"x18")x36"-48" long
Load trucks and trailers to full width with 2 long bales. Requires Nause 2950 Expansion Kit. Use GLN7X2-14 fork. Can be used to load 102" wide van trailers.

15 Cubes on 26' bed = 210 BALES¹

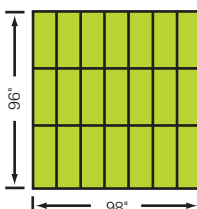

21 Bales (14"x18")x32" long *
Cross tie/square package. Load trucks and trailers to full width. Requires Nause 2950 Expansion Kit with extra hold down bar. Use GLN7X3-14 fork. Can be used to load 102" wide van trailers.

15 Cubes on 26' bed = 315 BALES¹

All bale packages are on edge.

* Optional 108" for doing up to (3) 36" long bales.

¹ All capacity based on bales stacked 5 high.